



# UTILIGUARD® UTILITY LOCATING SYSTEM FREQUENCIES

## RECEIVER

50 Hz*	480 Hz	8.01 kHz*
60 Hz*	484 Hz	8.19 kHz*
64 Hz	491 Hz	8.44 kHz
75 Hz	512 Hz*	9.5 kHz
98 Hz	560 Hz	9.82 kHz*
100 Hz*	570 Hz	16.9 kHz
120 Hz*	577 Hz	22.5 kHz
128 Hz	604 Hz	29.4 kHz*
150 Hz*	624 Hz	31.5 kHz
163 Hz	640 Hz*	32.8 kHz*
180 Hz*	680 Hz	38 kHz
208 Hz	740 Hz	44.6 kHz*
220 Hz	760 Hz	65.5 kHz
256 Hz*	800 Hz	78.12 kHz
263 Hz*	815 Hz*	78.13 kHz
273 Hz	870 Hz	80.4 kHz*
280 Hz	874 Hz	82.3 kHz
285 Hz	920 Hz	82.5 kHz
320 Hz	940 Hz	83.1 kHz*
340 Hz	968 Hz	89 kHz
380 Hz	982 Hz	118 kHz
400 Hz	1.02 kHz*	121 kHz
440 Hz	1.17 kHz*	128 kHz
460 Hz	1.45 kHz	131 kHz
470 Hz	3.14 kHz	200 kHz

## TRANSMITTER

256 Hz*	815 Hz*	80.4 kHz*
263 Hz*	870 Hz	82.3 kHz
273 Hz	920 Hz	82.5 kHz
280 Hz	940 Hz	83.1 kHz*
285 Hz	968 Hz	89 kHz
320 Hz	982 Hz	118 kHz
340 Hz	1.02 kHz*	121 kHz
380 Hz	1.17 kHz*	128 kHz
400 Hz	1.45 kHz	131 kHz
440 Hz	3.14 kHz	200 kHz
460 Hz	8.01 kHz*	
480 Hz	8.19 kHz*	
484 Hz	8.44 kHz	
491 Hz	9.5 kHz	
512 Hz*	9.82 kHz*	
560 Hz	16.9 kHz	
570 Hz	22.5 kHz	
577 Hz	29.4 kHz*	
604 Hz	31.5 kHz	
624 Hz	32.8 kHz*	
640 Hz*	38 kHz	
680 Hz	44.6 kHz*	
740 Hz	65.5 kHz	
760 Hz	78.12 kHz	
800 Hz	78.13 kHz	

\*Factory default frequencies